


Ultimate Dog Silencer™ Instruction Manual

The all new Ultimate Dog Silencer™ is designed to effectively stop nuisance barking using humane, no-shock techniques. This revolutionary anti-bark collar emits high-pitched sounds in direct response to your dog's barking and travels everywhere your dog goes. Eventually your dog learns to associate his barking with the unpleasant sounds and stops or significantly reduces his barking. Transform your dog today!

Included In This Package

- 1 Ultimate Dog Silencer (battery included)
- 1 Back Cover (H)
- 1 Adjuster Tool (J)
- 1 30-inch Nylon Collar (I)

Ultimate Dog Silencer – Part List

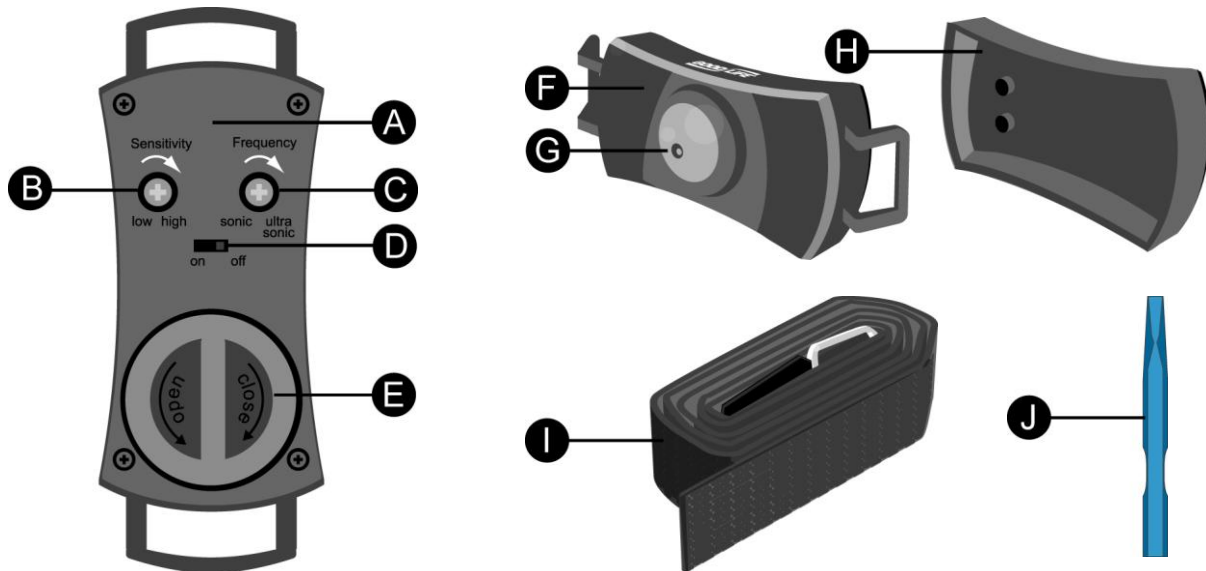

A – Back of the Unit
B – Sensitivity Dial
C – Frequency Dial

D – Power On/Off Switch
E – Battery Cover
F – Front of the Unit

G – Speaker
H – Back Cover
I – Nylon Collar

J – Adjuster Tool

Specifications & Features

- Humane, compact and lightweight.
- Ergonomically designed to fit the contours of your dog's neck and go wherever your dog goes.
- Emits both ultrasonic (inaudible to the human ear) and sonic (audible to humans and dogs) frequencies.
- Adjustable 30-inch collar fits a wide range of dogs.
- All-new DuraProof™ Coating is designed to withstand the unforgiving wear and tear of active dogs.
- Size: 2.95" (L) x 1.18" (W) x 0.87" (D) / 75 (L) x 30 (W) x 22 (D) (mm)
- Power Supply: 3V / CR2032 Cell Size Battery x 1
- Weight: 22 g

Getting Started

- **IMPORTANT:** Do not put the Ultimate Dog Silencer™ on your dog until completing the steps detailed in this section.
- Remove the **Back Cover (H)** from the device to reveal the **Back of the Unit (A)**.
- Insert your **Adjuster Tool (J)** into the **Frequency Dial (C)** and turn counter-clockwise toward the "SONIC" setting. Stop turning once you feel resistance. This will allow you to hear the sound emitted by the unit, which will be important as you continue through the steps in this section.
- Turn the **ON/OFF Switch (D)** to ON.
- Adjust the **Sensitivity Dial (B)** as shown in the section titled "Adjusting the Sensitivity" to find the best sensitivity setting for your dog's bark.
- Once you have configured the Ultimate Dog Silencer™ to the correct sensitivity level, set the **Frequency Dial (C)** back to "ULTRASONIC" by inserting the **Adjuster Tool (J)** into the dial and turning clockwise. Stop turning once you feel

resistance. This will set the device to emit sounds that only the dog can hear. If you prefer to hear the sounds instead, skip this step.

- If at any time your **Adjuster Tool (J)** bends or breaks, you may use a Phillips Head screwdriver to adjust the **Sensitivity Dial (B)** and **Frequency Dial (C)**.
- Thread one end of the **Nylon Collar (I)** through each of the two loops on the Ultimate Dog Silencer™.
- Put the **Nylon Collar (I)** on your dog. Adjust the collar to comfortably fit around your dog's neck. (Keep loose enough to fit two fingers between the strap and neck.)
- You may cut any excess length from the **Nylon Collar (I)** with a pair of scissors. However if you do so, we recommend melting the end of the collar with a lighter to prevent fraying. Make sure to do this after you have reattached and fastened the collar to the Ultimate Dog Silencer™.

Adjusting the Sensitivity

- The sensor inside the Ultimate Dog Silencer™ detects your dog's barking. Depending on the size and pitch of your dog's bark, you will need to adjust the **Sensitivity Dial (B)** so it detects your dog's bark every time.
- The **Sensitivity Dial (B)** is located on the left of the device and labeled "SENSITIVITY".
- To find the best sensitivity setting for your dog, first set your **Sensitivity Dial (B)** all the way to "LOW". When your dog barks, notice if the unit is emitting sound at all, or if it is sounding off too often.
- If you find that the collar is either not emitting sound at all or not emitting sound every time the dog barks, increase the sensitivity. To increase the sensor sensitivity, insert your **Adjuster Tool (J)** into the **Sensitivity Dial (B)** and gently turn clockwise toward the "HIGH" setting. If at any time you feel resistance, stop turning.
- If you find that the collar activates too often, decrease the sensitivity. To decrease the sensor sensitivity, insert your **Adjuster Tool (J)** into the **Sensitivity Dial (B)** and turn counterclockwise towards the "LOW" setting. If at any time you feel resistance, stop turning.
- At the lowest possible setting, the Sensor will not detect barking.
- If at any time your **Adjuster Tool (J)** bends or breaks, you may use a Phillips Head screwdriver to adjust the **Sensitivity Dial (B)**.

Adjusting the Frequency

- The sound frequencies emitted by your Ultimate Dog Silencer™ range from Sonic (audible) to Unaudible (inaudible to humans). Most dogs will respond better to the Ultrasonic sound, while some larger dogs may respond more favorably to Sonic sound. The Sonic frequency may also be used as a testing mode so that you can hear the unit sound off to ensure that the unit is activating properly.
- The **Frequency Dial (C)** is located on the right of the device and is labeled "FREQUENCY".
- To adjust the frequency to ultrasonic (inaudible) sound, insert the **Adjuster Tool (J)** into the **Frequency Dial (C)** and turn clockwise toward the "ULTRASONIC" setting. Stop turning once you feel resistance.
- To adjust the frequency to sonic (audible) sound, insert the **Adjuster Tool (J)** into the **Frequency Dial (C)** and turn the tool counterclockwise towards the SONIC setting. Stop turning once you feel resistance.
- To find the best frequency setting for your dog, we recommend that you start with the **Frequency Dial (C)** set to "ULTRASONIC". If your dog does not show any progress within two weeks, adjust the frequency as needed.

Important Notes

- The Ultimate Dog Silencer is a training device. **Please allow at least 2-3 weeks for optimal results.**
- To replace the battery, simply turn the **Battery Cover (E)** counterclockwise to open.
- If your dog's barking does not cease within a 2-3 weeks, it may be because your dog is barking due to instinct, is being harassed, is in a high stress area or is being protective. These types of barking are not nuisance barking.
- The Ultimate Dog Silencer is not waterproof. Do not submerge or expose it to water.

Refunds, Exchanges & Warranties

- All Good Life products are backed by a 30 Day Money Back Guarantee and 1 Year Manufacturer's Warranty, and must be handled by calling our Customer Care Center to receive a Return Merchandise Authorization (RMA) number. **Returns and Exchanges sent without an RMA number clearly displayed on the outside of the package will be returned to sender.**
- Guarantee starts the day you receive your order, and returns must be postmarked by the 30th day to be eligible. **We do not refund initial shipping costs or return shipping costs.** Before calling visit www.goodlifecompany.com/returns.

Contact Us

Toll Free: 1-800-657-8214
Outside the USA: +1-541-245-4488

Email: customerservice@goodlifellc.com
Website: www.goodlifecompany.com